


# inFace Blackhead Remover

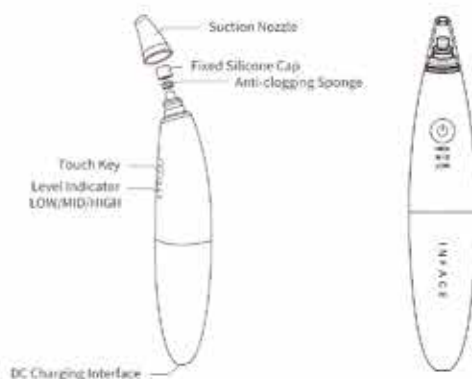

## MS7000 highlights:

1. inface pimple suction nozzle
2. Special relaxing suck mode
3. Not only suck blackhead, teach you how to tighten the skin pore

## Product Specifications

Product Model:	MS7000
Product Size:	183mm*35mm
Net Weight:	About 135g
Battery Capacity:	400mAh
Charging Voltage:	5V
Charging Current:	300mA
Charging Length:	About 2h
Standby Current:	40 uA
Working Temperature Range:	0°C~40°C
Materials:	Transparent PC, Matted UV, Plating
Suction strength:	Max 63kpa

# inFace Blackhead Remover



## Operation:

- 1.The instrument has two modes to choose. Mode 1 (blue light on) is continuous suction mode; mode 2 (orange light on) is suction-release mode.
- 2.In the off state, click touch key twice to turn on the instrument.
- 3.In the on state, long press touch key to switch the mode to mode2 -- suction-release mode.
- 4.In the on state, short click touch key once to switch the suction strength (LOW/ MID /HIGH).
- 5.In the on state, click touch key twice to turn off the instrument.

## Using Method:

### Tips Before use

- Mode1, blue light on (continuous suction mode): This mode has the strong suction force, suitable for skin types with thicker cuticles and large pores, which can strongly absorb deep blackheads of the skin.
- Mode2, orange light on (suction-release mode): Under this mode, the device works by suctioning and releasing, which is comfortable and less painful, suitable for skin types with thin cuticle and sensitive skin.
- Choose suitable mode to care your skin.

### Firstly, dissolve

1.After washing your face, attain with a hot towel for 3-5 minutes to relax the pores.

2.For better effects, It is recommended to wet the cotton pad with the blackhead derived toner, then apply the cotton pad to the nose and remove it after 8-10 minutes.



### Secondly, suck

1.Select the continuous suction mode or suction-release mode as needed, test the suction strength on your hand, then select the appropriate level.



2.Suck your skin with the instrument, then move it properly, do not stay in the same area for more than 2 second.  
3.After cleaning the blackheads, clean the suction nozzle with wet wipes or water.

### Thirdly, shrink

1.For better results, it is recommended to wet the cotton pad with the pore minimizer essence, then apply the cotton pad to the nose and remove it after 8-10 minutes.



2.If there is excess serum, tap your face until it is absorbed.

Please read this user's manual thoroughly before using, and keep it carefully. The product is personal item, and multiple users are not encouraged.

- Do not use this product in high-temperature environment.
- If the product is deformed or damaged, stop using to avoid accidents.
- This product should not be used for the eyeballs, eyelids, auricles, neck, veins, otherwise it may cause damage to your skin.
- Do not use the product for the skin that has received any cosmetic surgeries, including plastic surgery and rhinoplasty; do not use the product for wounded and scarred skin.
- Dry the water or other liquid on your hands before use to prevent water or other liquids from entering the instrument and damaging the instrument.
- If your skin and body feel pain or abnormal, stop using immediately.
- Clean and maintain the product in the off state.
- Children are not allowed the use the product, please keep it out of reach of children.
- Do not use the product near the flammable material (alcohol, benzene, nail polish remover, spray, etc.).
- The product is not water-proofed, please do not keep it in the bathroom or other wet places. Do not immerse it in water or rinse it under the faucet directly.
- Allergic people, people with skin diseases, dermatitis, skin allergies and severe sunburn, people with skin damage, eczema, swelling, etc. are not recommended to use the product.